



OPENING

How to use the Alu-Cab telescopic ladder

When opening up your telescopic ladder, you can follow these steps:

1. Release the strap securing the retracted ladder.
2. Position the ladder in an upright orientation ready for use.
3. Step on the bottom rung to hold the ladder firmly in place.
4. Pull up each rung to its full extension and **ensure that the locking mechanism is engaged before trying to extend the next rung. You will hear it lock in place.**
5. Repeat this for several steps until you reach the desired height.
6. Once all desired rungs are open and secured in place, the ladder is now safe to use.

1. Slot the ladder into the catch to secure



2. Ensure that you secure the ladder with the anti-luce as shown



CLOSING

Retracting the Telescopic Ladder

Once you are done using the ladder, you will need to collapse it ready for storage.

The most common precaution here is to avoid placing your hands between the rungs when retracting the telescopic ladder.



CAUTION!

The following steps should be followed when folding your telescopic ladder after use.



1. Hold the ladder by the couplings beneath the rung and ensure the latches are active.
2. Place your thumb on the lock buttons you want to exclude with the rest of your hand placed under the coupling - Putting the rest of your hand over the locking mechanism may result in it being stuck.
3. Push the lock buttons simultaneously towards each other, as the upper stage drops.
4. Ensure that you keep your fingers well away from the rungs, facing outwards
4. Repeat this for each step until all the rungs have collapsed.
5. Once you have retracted the ladder, secure it with a strap ensuring that it is tightly fastened.